



Pedique

Tables

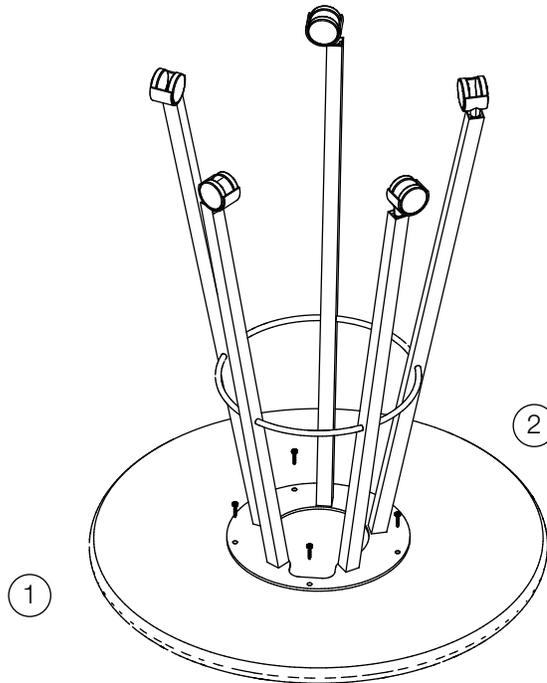

Hardware Included:



#12 x 1
Pan Head Screw

Tools Required:

- #3 Phillips Head Screwdriver


Step 1:

Place the table top upside down on a clean, padded surface.

Step 2:

Center leg assembly on underside of top and attach using #12 x 1" PH Screws (do not over tighten).

instructions-pedique-191223



Assemble tables only as described in this guide. All fasteners must be tightened securely and checked regularly. Failure to do so could cause instability and injury.

mtcontract