



OTZ

Standard & Cylinder Base

Tables

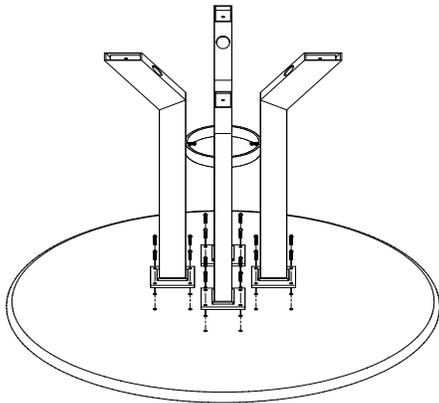


Standard Base

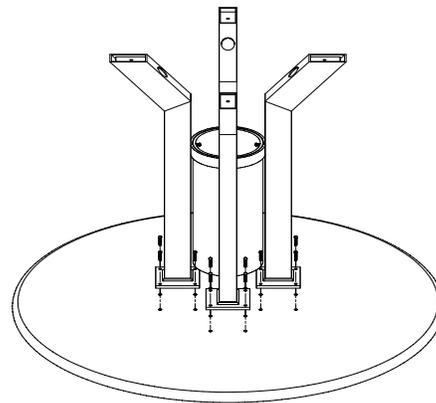


Cylinder Base

Hardware Included:

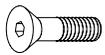

1/4 - 20 x 1"
Flat Head
Machine Screw

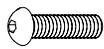

1/4 - 20 x 1"
Pan Head
Machine Screw

Tools Required:

- 5/32 Allen Wrench

Step 1: Attach the steel plate to the top of each table leg using (2) 1/4-20 x 1" Flat Head Machine Screw.

Step 2: Assemble table base together with the steel ring using 1/4-20 x 1" Button Head machine screw thru ring into each leg. If Wood Cylinder insert is used attach 1/4-20 x 1" Button Head machine screw thru the inside of the cylinder then thru the steel ring into the leg.

Step 3: Place the table top upside down on a clean, padded surface. Align holes in base frame assembly with inserts in underside of table top. Attach base with 1/4-20 x 1" BH machine screws. Install Levelers.

Verify all bolts/screws are tightened.

instructions-otz-230213

