

Tile Installation Guide

Hardware Included:

10-32 x 3/4" Nylon-Tipped set screws
3/32 Allen Wrench

With upper and lower horizontal mounting tracks in place and properly installed, you are ready to "mount" elements Tiles.

NOTE: More than one person is required for installations, especially for elements Tiles wider than 24".

1 Holding elements Tile (A) at an angle, insert top of aluminum frame into the groove of the Upper Horizontal Mounting Track (B). Move the bottom of the Tile towards the wall and track as you insert the top of the Tile into the Upper Track allowing for the bottom of the Tile to clear the Lower Horizontal Mounting Track (C).

2 Once the bottom of the elements Tile has cleared the bottom track, lower the Tile into the groove (A) of the Lower Horizontal Mounting Track. The Tile rests on the Lower Horizontal Mounting Track and the "lip" (B) on the top of the aluminum frame will catch the front of the extrusion of Upper Horizontal Mounting Track.

3 With the elements Tile in place between the Upper and Lower Horizontal Mounting Tracks the Tile can be adjusted left and right. Once the Tile has been adjusted and is in position, secure in place with Nylon-Tipped set screws (A) using 3/32 Allen Wrench.

Figure 1

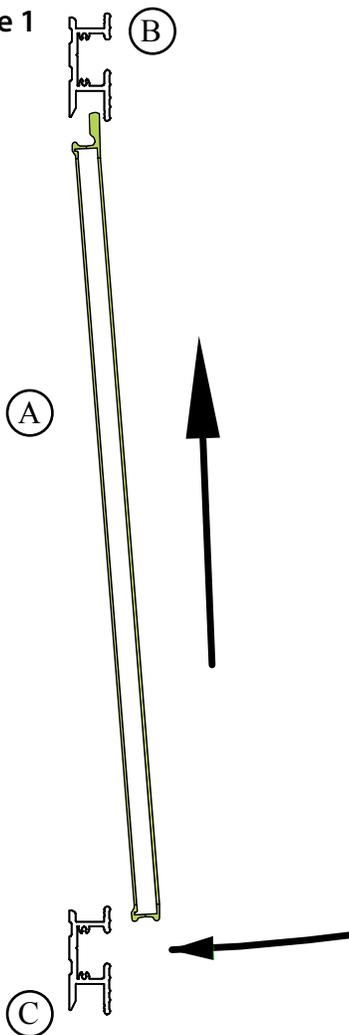


Figure 2

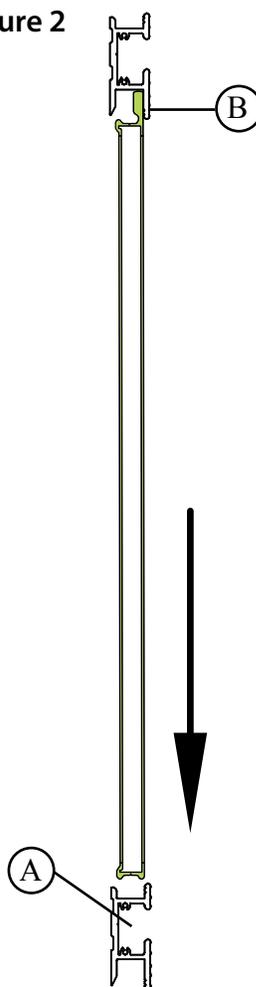


Figure 3

