


Vector

Vector & Vector Occasional

Tables Occasional

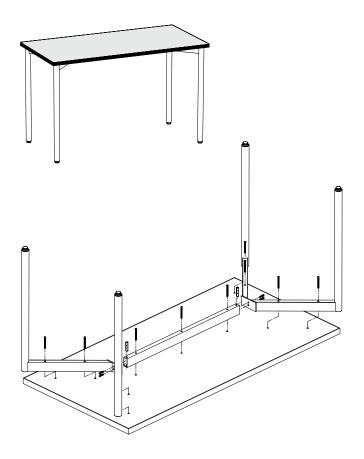

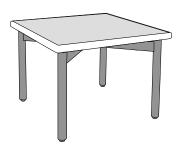

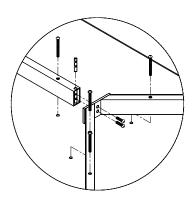

Hardware Included:

Tools Required:

• 5/32 Allen Wrench





1/4 -20 x 1" Button Head

1/4-20 x 2-1/2" Bolts

Step 1: ASSEMBLE LEG FRAME TO SPANNER

Drop short neck end of a cylinder shoulder bolt into each end-hole of the spanner and seat each bolt as shown. Align holes in cylinder shoulde bolt with the holes in leg frame as shown. Secure with 1/4-20 x 1" BH Bolt.

Step 2: ATTACHING BASE FRAME ASSEMBLY TO THE TOP

Place the table top upside down on a clean, padded surface. Align holes in base frame assembly with inserts in underside of table top. Attach base with $\frac{1}{4}$ -20 x 2-1/2" BH Bolts. Install Levelers.

Verify all bolts/screws are tightened.

instructions-vector-230214

