

Cabinet Installation Guide

Tools Required:

Phillips Screwdriver

With upper and lower horizontal mounting tracks in place and properly installed, you are ready to "mount" elements Cabinets.

NOTE: More than one person is required for installations. Mount Wall Cabinets to upper track before mounting Base Cabinets to lower track.

Step 1a:

Before you begin, be sure the lip of the cabinet clip is extended out far enough to catch the track. If not, loosen clip screw using Phillips Screwdriver.



Figure 1b

Figure 1a

Note that on Tall Cabinets there will be 4 clips, two in the upper corners, and two more that attach to the lower horizontal mounting track which are mounted beneath the cabinet's stringer.



Clip Screw

Step 1b:

Fach elements cabinet is manufactured with a cutout in each end panel to allow for track mounting. The lip of the cabinet clips can be seen from the exterior of the back of the cabinet.

Figure 1c




Cabinet Clip

Step 2a:

Lift elements cabinet into place near the track it is being mounted onto. Visually align the cabinet clip to the center of the track as you move the cabinet closer to

Center of Track

Figure 2a

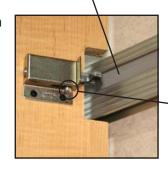


It is important that all cabinet clips are positioned properly so that all of them "catch" the track.

Step 2b:

Once the cabinet is in position, lower it slowly allowing the weight of the cabinet to be supported by the cabinet clips resting on the horizontal track(s). Verify that each clip "caught" the track.

Figure 2b

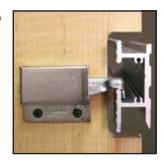

Cabinets may be adjusted side to side on the track until the cabinet clip screws have been tightened.

Step 3:

With the cabinet in its desired location, tighten the clip screws on each clip to securely "lock" the cabinet into place. Use the height adjustment screws located on the bottom of the cabinet clips to raise the cabinet if leveling is required. In areas with earthquake requirements, be sure to raise the cabinet to the highest point on each side. This insures the cabinet cannot be lifted off of the track.

Height Adj. Screw



Raising the cabinet to the highest point eliminates the space required to lift the cabinet enough to remove the lip of the clip from the track.

To Remove Cabinets:

Loosen the clip screws and lift cabinet until the lip of the cabinet clips can clear the track, then move slowly away from the wall.

Cabinet jack is available for purchase for even easier installation of upper and lower cabinets! Contact the factory for details.



